

aquataps

THE FILTERED TAP COMPANY


CLASSIC MODEL

Installation & User Guide

THE TAP FOR ALL



WELCOME TO YOUR BRAND NEW

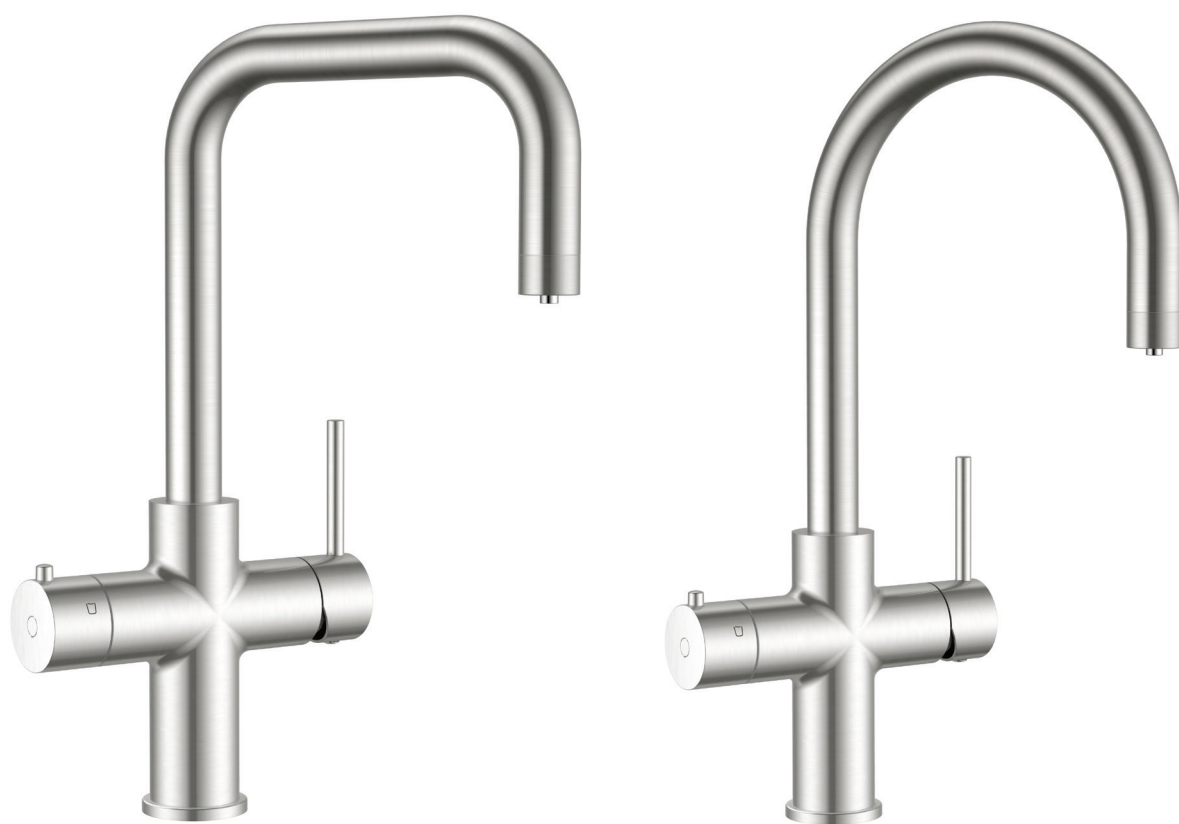

aquatap **CLASSIC**

4 in 1 BOILING WATER TAP

IMPORTANT NOTICE:

When correctly installed and maintained with care, your Aquataps boiling water tap will give you many years of trouble free service. **This product is not for outdoor use.** This product can cause harm if installed incorrectly. Should you decide to install this product yourself, please refer to the instructional videos or guide on our website. Alternatively, please contact a professional installation service.

Please read and fully understand all installation instructions before installing and using this application. If in doubt contact a qualified plumber or retailer to assist.

Check that no parts are missing or damaged. If parts are missing do not install and contact our customer services.

A standard 220/240v grounded 13 amp switched electrical outlet is required under the sink for the appliance electrical power. The Aquataps instant hot water tank is only intended for use with compatible Aquataps boiling water taps. Using this tank with any other tap will invalidate the warranty.

Do not plug in the tank until all water connections have been checked, is watertight and the tank has been filled. The tank is filled once water starts to pass out the tap spout when the boiling tap function is operated. It is recommended before using the tank, to flush through several litres of water to remove any air in the system when installing.

Please note, that in order to avoid having pressurised boiling water and to comply with UK byelaws, this is an open vented system. In order to ensure the instant hot water tank delivers the highest quality drinking water and is protected from limescale build up, the water filter must be replaced **every 6 months**. Failure to do so will invalidate your product warranty.

Filters can be purchased online at **www.aquataps.co.uk**.



- To prevent against electrical shock do not place the hot water tank near or in water or other liquids and install on a flat surface.
- Do not install in environments above 35°C or exposed to freezing.
- Do not operate or install electrical connections with wet hands
- Do not install the appliance if it appears damaged in any way
- Only use power lead supplied with the product. If the power lead is damaged, stop using immediately and contact customer services for a replacement.
- Do not remove tank casing, this product is not serviceable and should be returned to the manufacturer in the event of a fault.
- Do not modify the tank or remove the plug as this will invalidate the warranty and could cause serious injury. Design for UK 3 pin socket only.
- If the unit is unused for extended periods of time it should be unplugged, drained, re-filtered and refilled.
- The tap and water tank can be cleaned with a lint free damp cloth.
- Do not use any abrasive or corrosive cleaning products as this will damage the surface of the product.
- Replace the filter every 6 months




aquatap **CLASSIC**

4 in 1 BOILING WATER TAP

- | | |
|--|---|
| 1x A 4 in 1 Tap | 1x 4 Hose For Filtered or Chilled Water |
| 1x C Rubber Washer | 1x 5 Hose For Filtered Water Into Boiler |
| 1x D Metal Washer | 1x 6 Hose For Boiling Water from Boiler |
| 1x E Fixing Nut | 1x 7 Filter Inlet Hose |
| 1x F 1/2" to 1/4" push fit connector | 1x 8 Filter Outlet Tube (3/8" PE Tube) |
| 1x 1 Flexible Hose For Cold Water | 2x 9 1/4" PE Tube |
| 1x 2 Flexible Hose For Warm Water | 1x 10 Metal T-Piece |
| 1x 3 Flexible Hose For Filtered Water | 1x 11 Plastic 3-Way Connector |

aquatap CLASSIC


4 in 1 BOILING WATER TAP

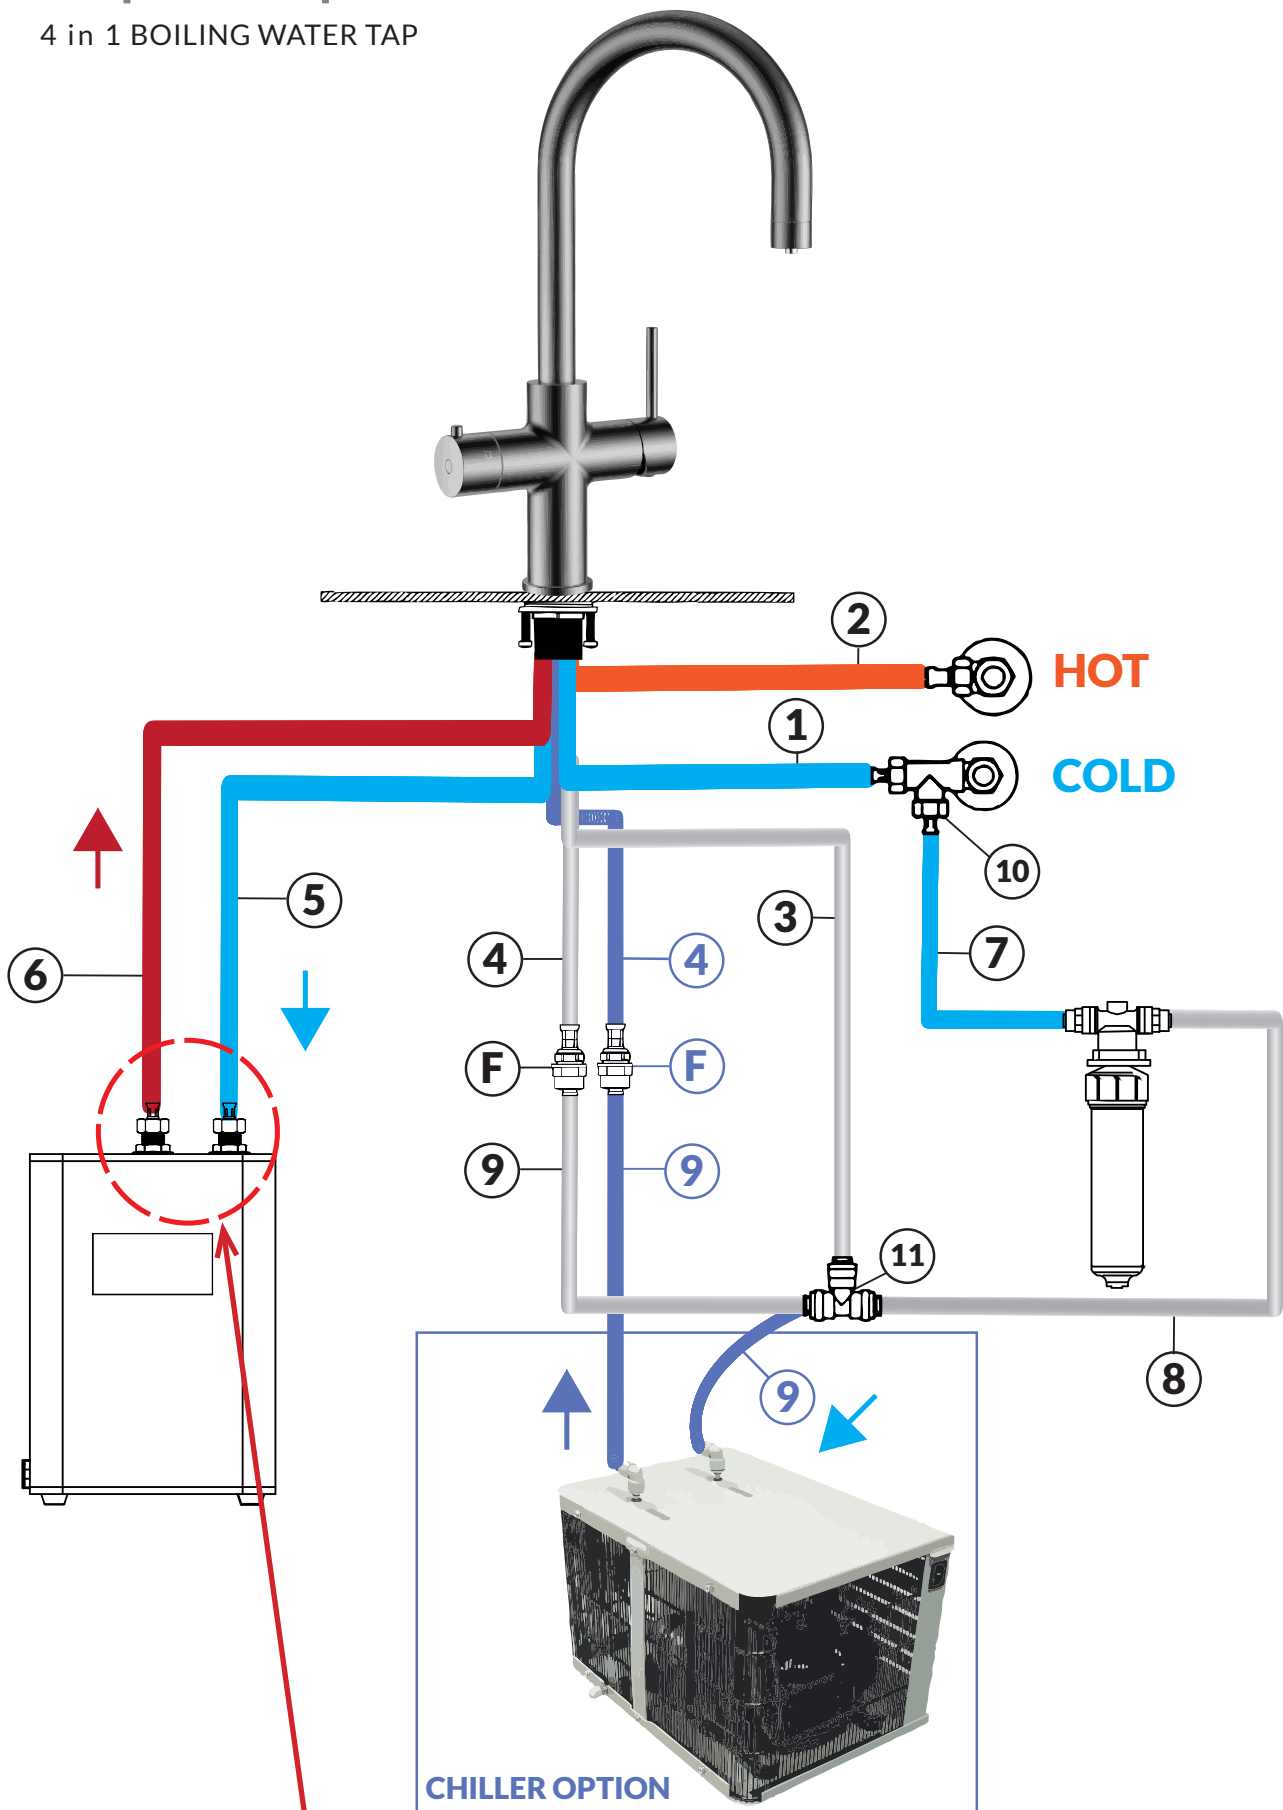

WARNING!: The location of the inlet (blue) and outlet (red) may be positioned differently on your boiler. Please make sure you connect the hoses correctly.


TOP TIP : Pass the 3 hoses with nuts through the surface hole first and then pass the 3 hoses without nuts to help with your installation.

1

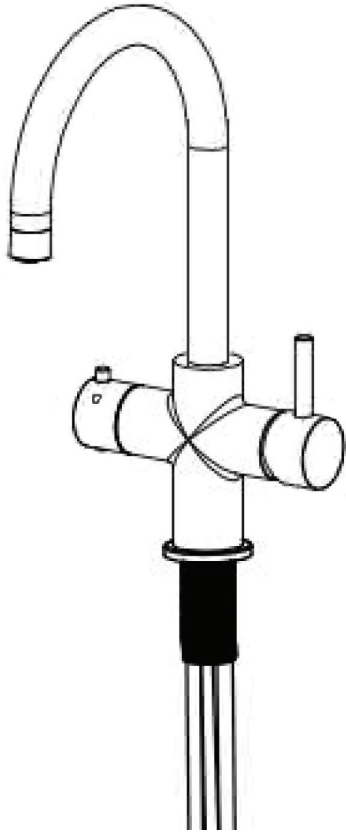


Remove the **rubber washer (C)**, **metal washer (D)**, and **fixing nut (E)** from the base of the tap. Then put all the flexible hoses through the tap hole.

2

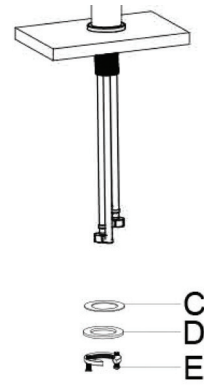


Put the **rubber washer (C)**, **metal washer (D)**, and **fixing nut (E)** back onto the tap by feeding the hoses through them. Fix them onto the thread at the base of the tap and tighten by hand.

3

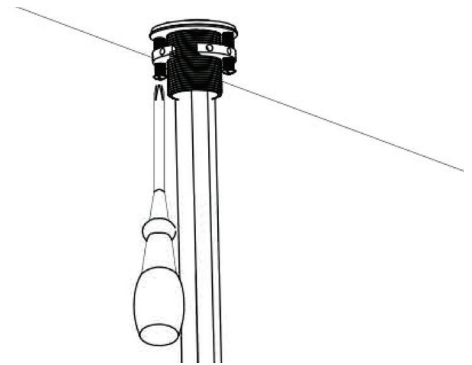


Use a philips screwdriver to tighten the two fixing screws.

4

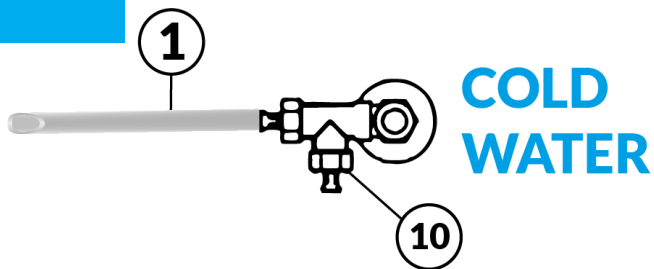


Connect the **Metal T Piece (10)** to your mains cold water supply. Then Connect the **cold water inlet hose (1)** to one side of the **Metal T Piece** and tighten it with an adjustable spanner.


5

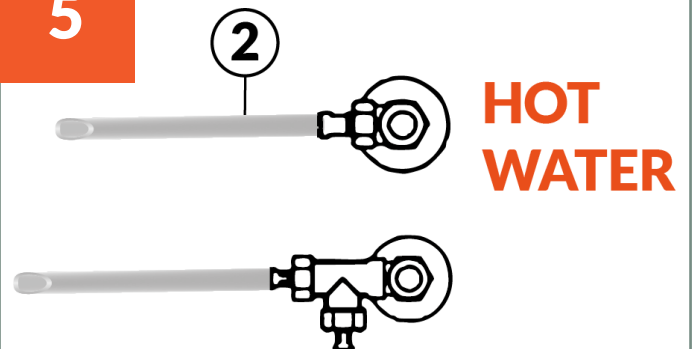


Connect the **hot water inlet hose (2)** to your mains hot water supply and tighten it with an adjustable spanner.

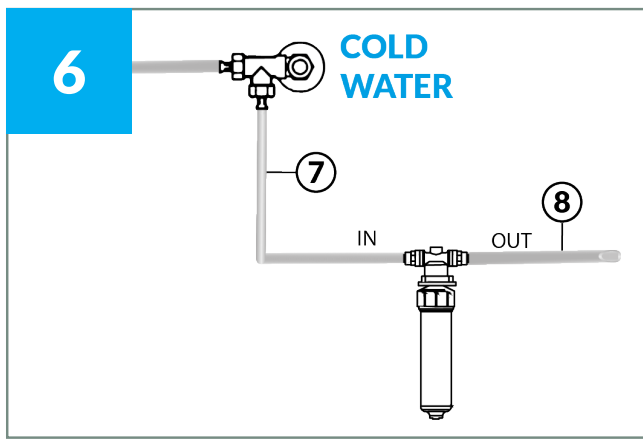


Connect **hose (7)** to the **Metal T Piece** on the cold mains and tighten it with an adjustable spanner. Insert the other end of the **hose (7)** into the filter's inlet. Insert the filter outlet hose (**8, plastic 3/8 PE tubing**) into the filter's outlet.

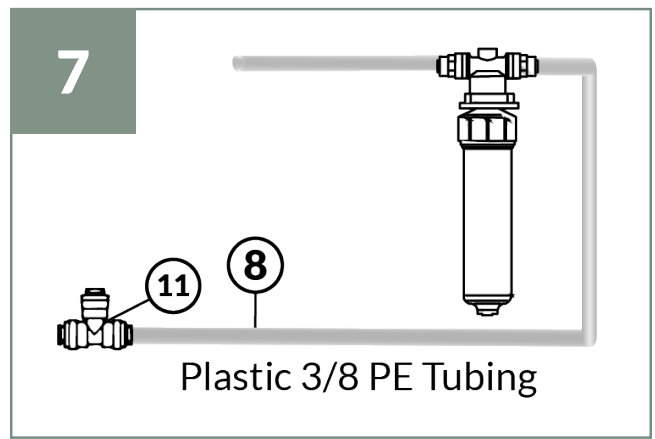


Connect the filter outlet **hose (8)** to one side of the **Plastic 3-way Connector (11)** by removing the blue clip first and then re-attach the clip to secure into place.

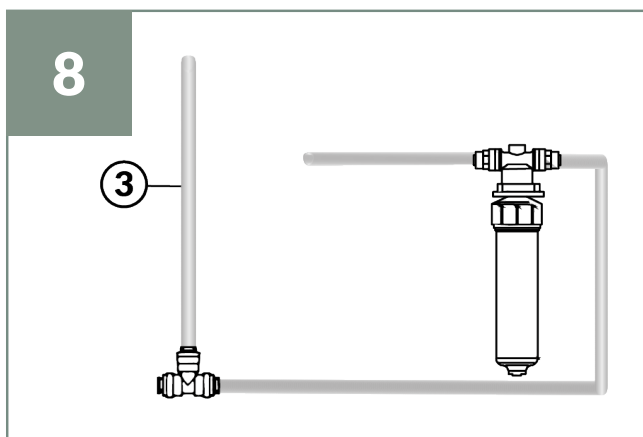


Connect hose number (**3**) coming from the tap to the other side of the **Plastic 3-way Connector**, by removing the blue clip first and then secure by using the blue clip once attached.

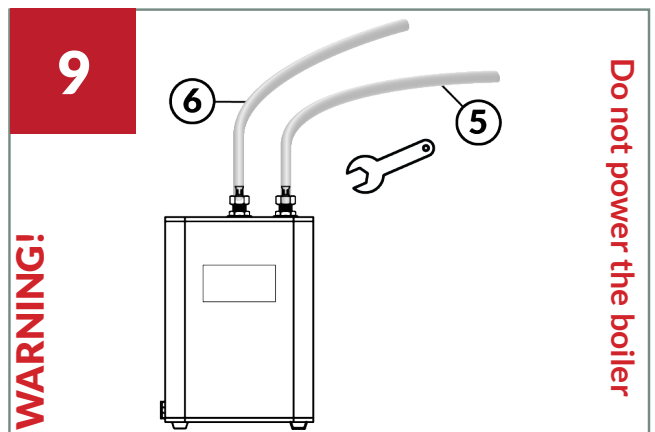


Connect **hose (6)** to the outlet of the boiler (**Red**) Please make sure the rubber washer is in place first, **hose (5)** to the inlet (**Blue**) and hand tighten them. Using an adjustable spanner tighten further by a maximum of one turn. **WARNING! The inlet and outlet of the boiler may differ. The inlet is always in the colour BLUE and the outlet is always in the colour RED. Do not power the boiler at that stage!**

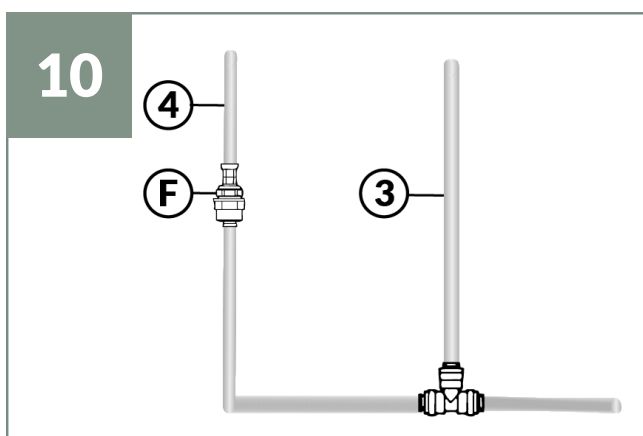

Connect **hose (4)** to the **plastic 1/2"** screw to **1/4" push fit connector (F)**. Insert one end of the 1/4 inch tubing to (**F**). **If you have a chiller now go to step 11.** Otherwise, connect the other end of the 1/4 inch tube (**9**) to the **plastic 3 way connector** and move to step 12.

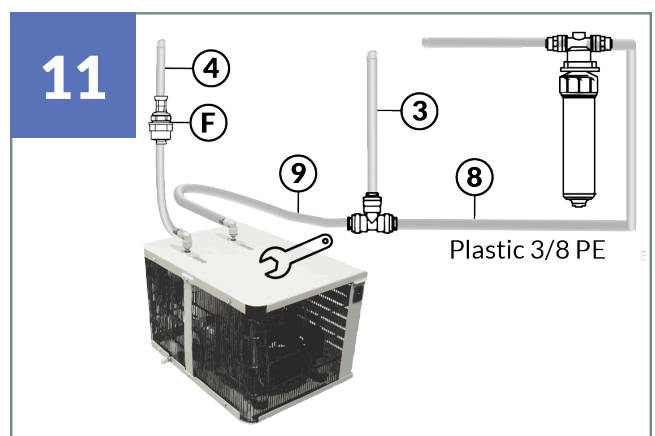


If you are connecting a chiller unit, connect the other end of the **1/4 inch tubing (9)** that's connected to (**F**) to the water outlet of the chiller unit. Using another piece of **1/4 inch tubing (9)** connect one end to the **plastic 3 way connector** and other to the water inlet on the chiller. **Do not power the chiller at that stage!**

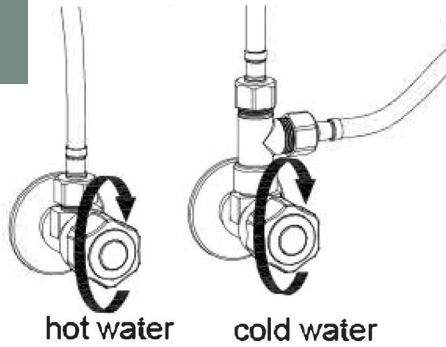12

Turn on your mains hot and cold water, **check and ensure no connections are leaking.**

Push the **safety catch on the left hand handle**, then **turn it towards you** for filtered water. **Run 3 litres to flush** the filter.

Push the **safety catch and turn the handle away from you, and hold** to fill the boiler; this may take a minute, no water will come out of the tap until the boiler is full.

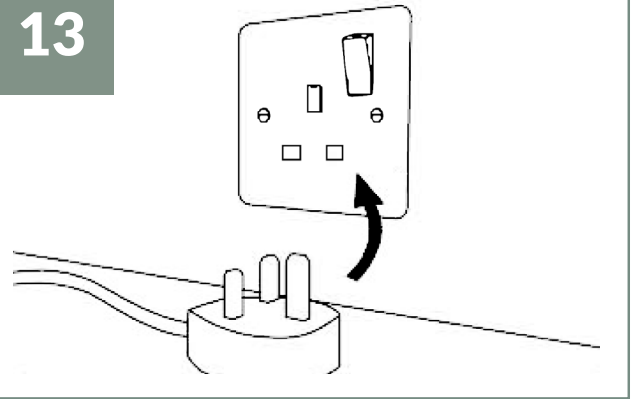13

Insert the plugs of the boiler (and chiller if installed together) into the power socket and **switch on.**



CUSTOMER CARE

Tel: 01268 727823

Email: info@aquataps.co.uk

www.aquataps.co.uk